Strip-Curtains.com

Chain Hoist All Season Roll-Up Doors

STAND-OFF MOUNTING METHOD INSTALLATION INSTRUCTIONS



READ THIS FIRST

Carefully examine the crate(s) for damage before opening. If the carton is damaged, immediately notify shipping company. Open the carton(s) and remove all protective packaging. Retain the shipping carton(s) until the unit(s) is installed and properly operating. Strip-Curtains.com is not responsible for delayed or late claims.

Serial No:	Model #:	Date Purchased:
	1110401 #1	

─ Warning ≡


To Reduce the Risk of Injury, Observe the Following:

- Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.
- Installation work must be done by a qualified person(s) in accordance with all applicable codes and standards.
- When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.

Read and Save These Instructions


Please read the "READ THIS FIRST" note on the front cover of this manual before proceeding.

TYPES OF DOORS

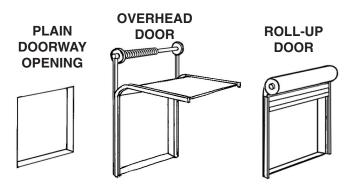

There are a variety of doors used at both industrial and commercial facilities. Each has its specific opening/closing mechanism. This Screen-Pro unit has been shipped with hardware to accommodate a Stand-Off Mounting Method. It should be mounted in front of any rails or guide tracks and centered on the doorway opening. Also, the Screen-Pro guide tracks should be on the outside of any rails or tracks used with the security (regular) door.

SCREEN-PRO COMPONENTS

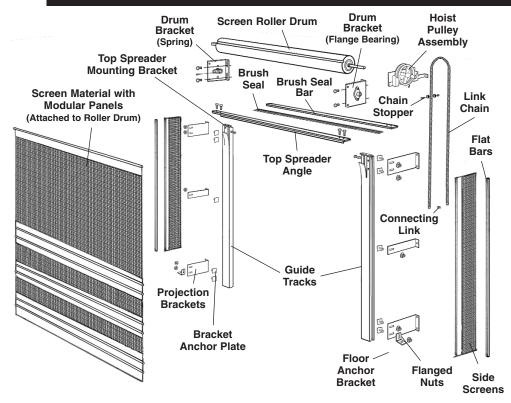

REQUIRED TOOLS

It is recommended that two people install the door together.

The following tools will be needed for installation:


- Carpenter's Level (Min. 4' Length)
- Carpenter's Square
- Hammer Drill
- Masonry Drill Bit

(For 3/8" Diameter Anchors)


- 3/8" Diameter and Various Wall Anchors
- Assorted Shim Stock
- Socket and Wrench Set
- Hand Tools
- Four Bar Clamps (36" Long)
- Two Ladders
- Forklift (Supplied by Dealer or Customer)

Lay the basic components in front of the doorway opening.

STEP 2

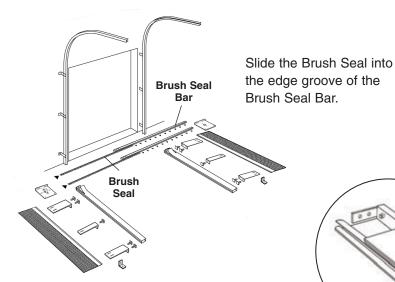


STEP 3

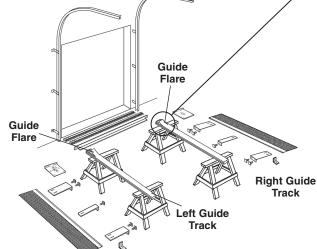

STEP 4

Slide each Side Screen into the groove that is at the bottom outside edge of the Track Guides.

Note: If unit is being mounted directly to the wall (not standoff) Side Screens are not necessary and you can skip Step 2.

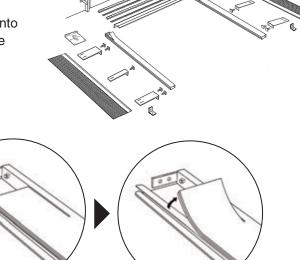



Using work horses will make the assembly process easier although it is not essential. Place the Guide Tracks on the horses with the Guide Flare Plate facing up.


IMPORTANT

The Guide Track Flare Plate ships flat and must be bent out 11/2" before any assembling takes place.

NOTE: There is a left and a right Guide Track.

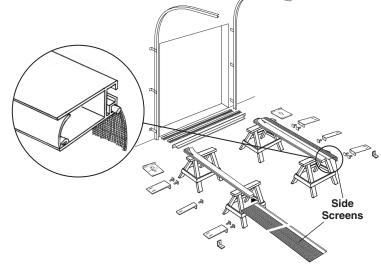


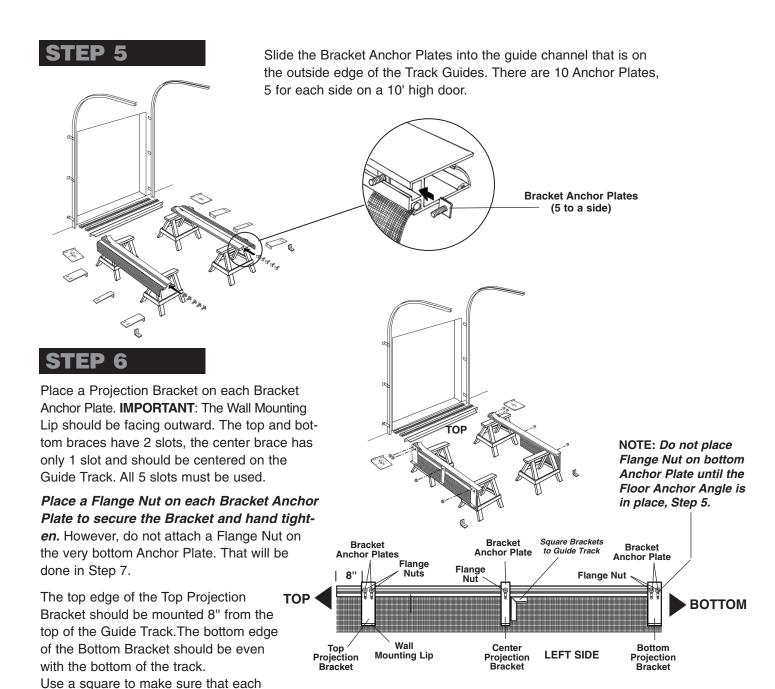

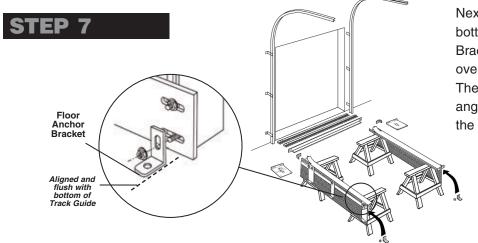


Projection Bracket is perpendicular to the Guide Track. Then tighten with a wrench.


Next, attach a Floor Anchor Bracket to the bottom of each Guide Track using the Bracket Anchor Plate. Place the oval hole over the bolt and tighten with a flange nut. The Floor Anchor Bracket should be at right angles with the Track Brace and flush with the bottom of the Guide Track.

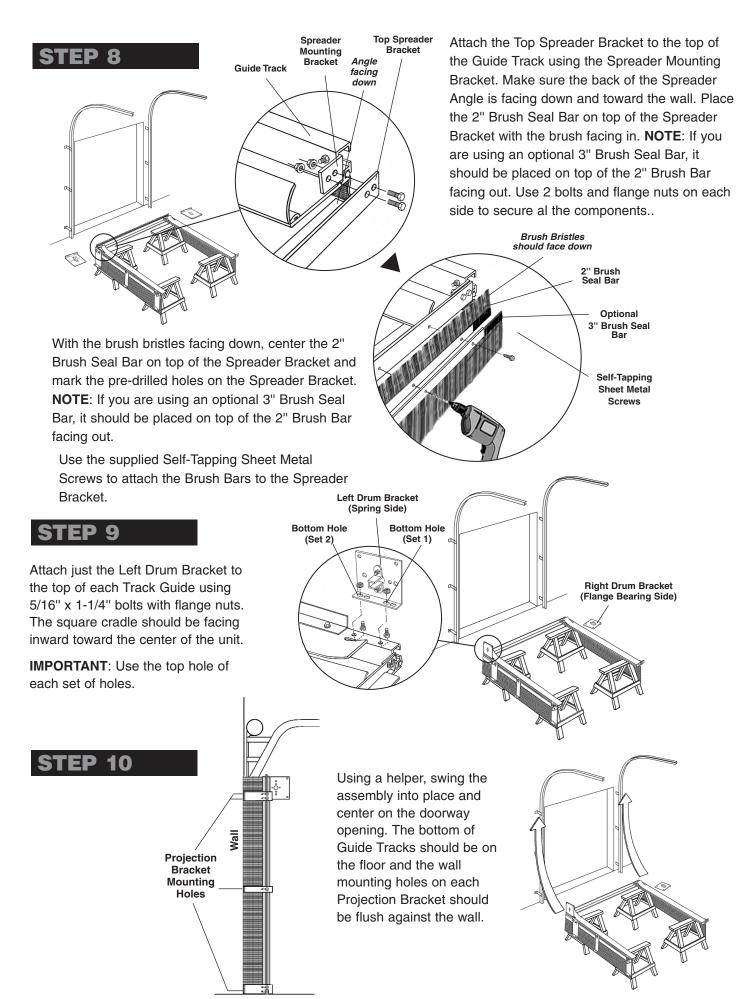


Once the assembly is centered, make sure that each Guide Track is plumb. Then mark the Projection Bracket mounting holes.

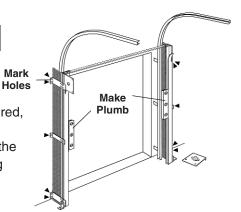

Remove assembly and drill all 10 holes. If you are mounting to a concrete wall or concrete block, wall, anchors will be necessary (not supplied).

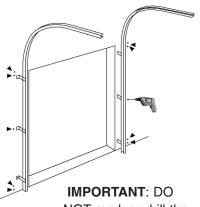

NOT mark or drill the Floor Anchor Bracket mounting holes. That is Step 13, Page 7.

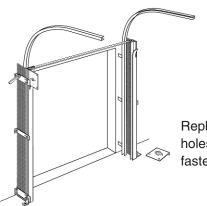


Replace the assembly and align all the mounting holes. Fasten the unit to the wall using appropriate fasteners for the mounting surface.

STEP 12

The assembly might need to be moved toward the wall. The distant is determined by the space needed for any door handle(s) that are attached to the security door. First, slightly loosen all Bracket Anchor Plate Nuts. Then run the security door up the rail to make sure the handle(s) clear the top of Screen-Pro assembly. Once the adjustment is made, make sure the track is plumb and tighten all Bracket Anchor Plate Nuts.


At this point the Side Screens might need to be trimmed using scissors or a utility knife. The Screen should be 3" wider than the distance from the Guide Track to the wall. Carefully place the excess material against the wall, fold it toward the doorway opening and secure it with the supplied aluminum bar.

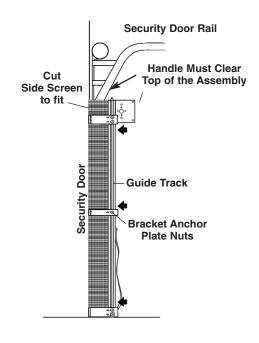


TIP: It is much easier to do this procedure when the security door is open.

WARNING


The spring tension for the Roller Tube is pre-set at the factory and is shipped with the Lock Plate in place. DO NOT remove the Spring Locking Plate until the assembly process is completed. Also DO NOT remove the Roll Ties until the Roll Tube is secured to both End Plates.

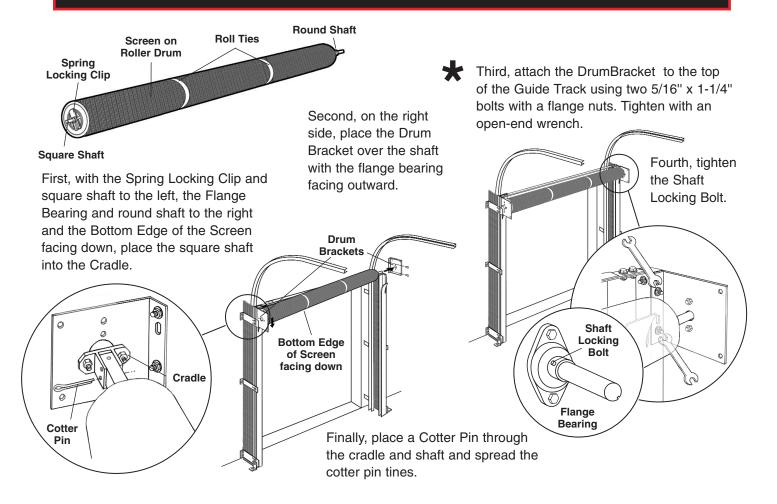

At this point the Screen Roller Drum must be leveled. The Drum Bracket Mounting Bolts on one or both sides can be loosened and the drumcan be accurately leveled.

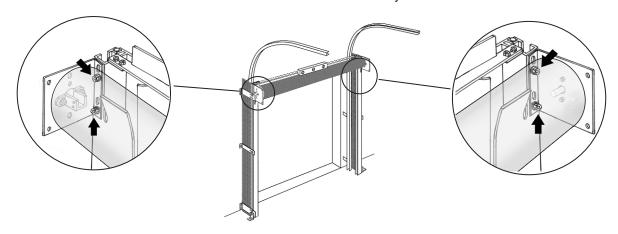


of the Hoist Pulley Assembly through the 2 Chain Guides.

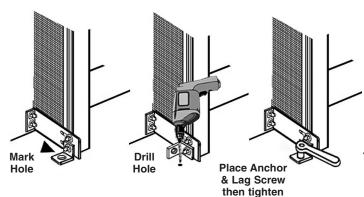


Next, the Screen-Pro should be fastened to the floor using the Floor Anchor Angles which were attached to the Bottom Track Braces (left & right) in Step 6. First, mark the holes. Second, drill the holes. Finally, place the screw anchors and secure with a lag screws.

Test the unit for free movement and spring tensioning.

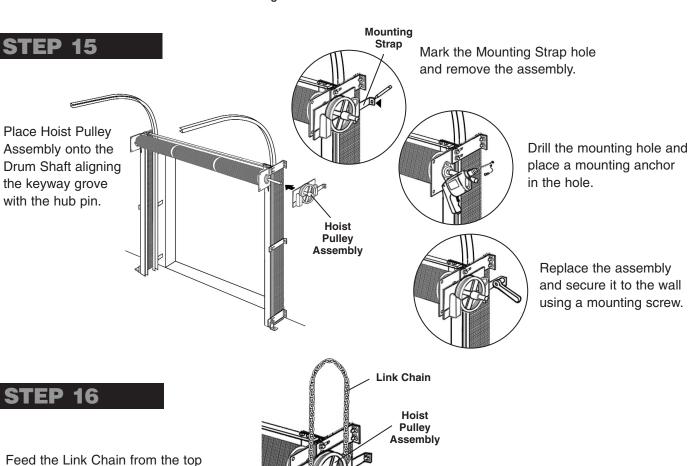


Connecting Link

Chain Guides

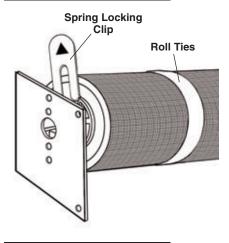


With the Screen Roller Drum in place, remove the Spring Locking Clip.

Then carefully cut the Roll Ties without cutting the screen. Slip the bottom edge of the screen into the Guide Tracks. Place the leading edge in front of the Rubber Gasket to create a seal.

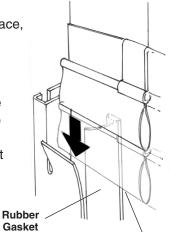


Bottom Edge

 STEP 18




Front Chain Guide

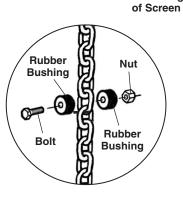

Affix the Rubber Bushing Chain Stopper through the marked link like the illustration above.


STEP 19

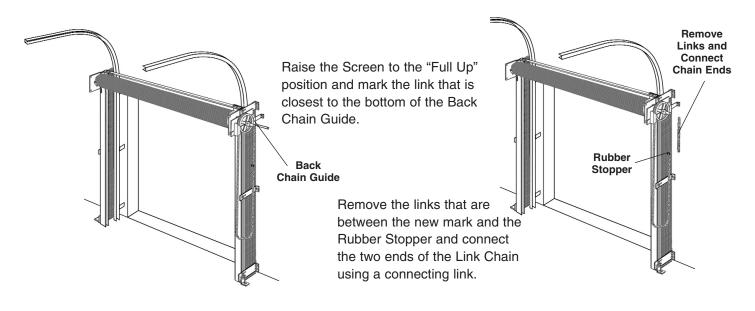


ADDING TENSION TO THE SP

If after testing the door movement, the spring needs more tension, the following procedure


should be taken.

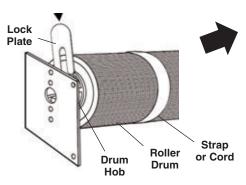

 
First, wind up the screen so it is completely on the Roller Drum. Using a strap or cord, secure the screen so it is unable to unwind. Place the Lock Plate into the Drum Hub.



Then, remove the Cotter Pin on the left side.

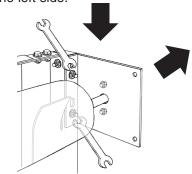

Next, detach the right side Drum Bracket from the right Guide Track. Then lift the Screen Roller Drum out of the left Drum Bracket cradle.

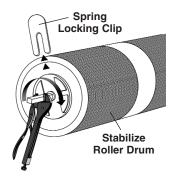

Finally, with the Roller Drum totally stabilized, lock a Vise Grip onto the shaft. Keeping everything in tension, remove the Lock Plate. Turn the shaft clockwise one complete turn and replace the Spring Locking Clip.

After tensioning, replace the Roller Drum in reverse order.

NOTES