

EconoClear INSTALLATION INSTRUCTIONS

STEP 1

VERIFY THAT THE FRAME IS PLUMB & SQUARE. IF NOT, IT MAY BE NECESSARY TO PLACE SHIMS BETWEEN THE BASE OF THE BRACKET AND THE JAMB (SEE FIGURE 1).

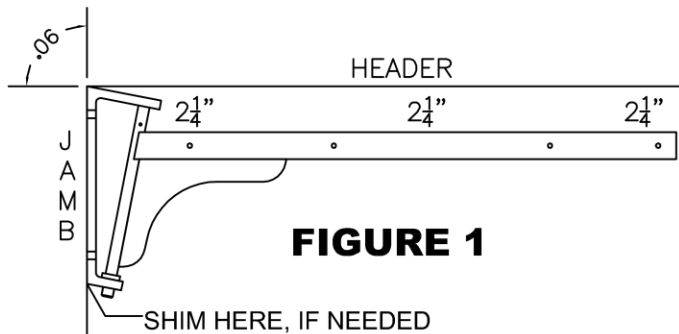


FIGURE 1

STEP 2

CHASE GRAVITY BRACKETS ARE DESIGNED, BUT NOT REQUIRED, TO BE MOUNTED IN THE CENTER OF THE DOOR JAMB. OPENINGS WITH DOOR FRAMES WIDER THAN 16", OR APPLICATIONS WHERE THE BRACKETS WILL BE MOUNTED MORE THAN 8" FROM ONE SIDE OF THE FRAME, WILL REQUIRE THE BRACKET BE LOWERED IN THE OPENING, AND A VALANCE INSTALLED TO SEAL THE GAP ABOVE THE DOOR PANEL.

ONCE THE LOCATION OF THE BRACKET HAS BEEN DETERMINED, HOLD THE BRACKET BASE FIRMLY AGAINST THE JAMB AND MARK ONE OF THE TOP MOUNTING HOLES.

DRILL AND TAP, OR LAG THE BRACKET SECURELY TO THE JAMB. MOVE THE BASE OF THE BRACKET UNTIL THE BRACKET ARMS ARE IN A STRAIGHT LINE AT THE CENTER, AND MARK THE REMAINING HOLES.

STEP 3

REMOVE THE BRACKET AND DRILL (AND TAP, IF NECESSARY) THE REMAINING HOLES.

STEP 4

REPLACE THE BRACKET AND SECURELY FASTEN TO THE DOOR JAMB.

STEP 5

MOUNT DOOR PANEL ON BRACKET ARM, USING THE FASTENERS PROVIDED (SEE FIGURE 2).

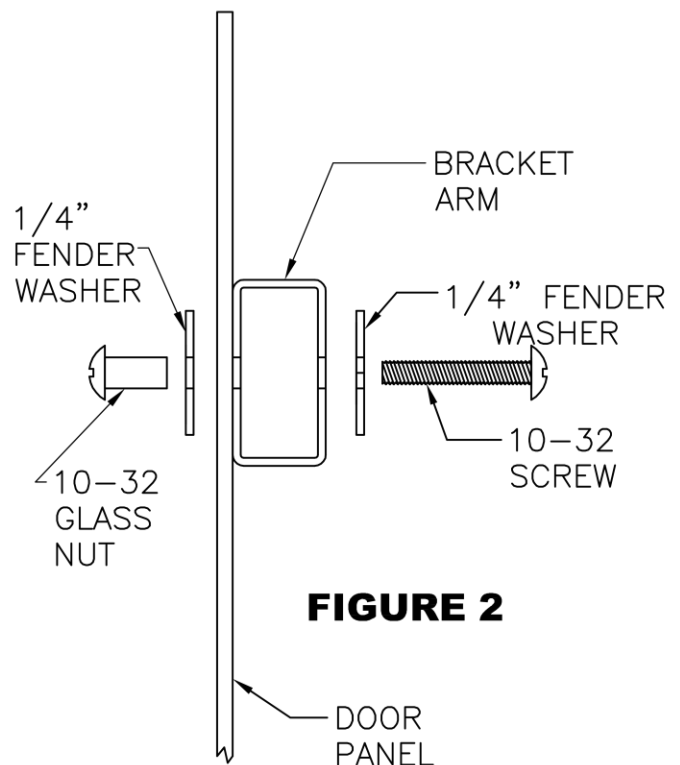


FIGURE 2

IMPORTANT:

AFTER INSTALLING DOORS, CHECK TO SEE THAT THE DOOR HANGS SQUARELY IN THE OPENING. IF THE DOOR PANEL SAGS, INSTALL ADDITIONAL SHIMS UNDER THE LOWER PORTION OF THE HINGE BASE, UNTIL THE PANEL IS SQUARE IN THE OPENING. FOUR $\frac{3}{8}$ " FLAT WASHERS ARE PROVIDED FOR SHIMMING PURPOSES, IF NEEDED.