

2

1

OLD PART NO.

A

JMHOD

REV.

1) INSTALL DOORS IN OPENING.

2) ORIENTATION OF HOLD OPEN BRACKET.  
SEE FIGURE A. EDGE OF BRACKET WILL  
BE FLUSH WITH RADIUS OF JAMB EDGE.

3) SWING DOOR TO THE OPEN POSITION,  
LOWER HEIGHT OF BRACKET, UNTIL THE  
FLAT AREA, BEHIND THE HOLDING ANGLE,  
SITS FLAT ON THE TOP OF THE DOOR PANEL.  
SEE FIGURE B.

NOTE: BRACKETS ARE SUPPLIED IN RIGHT  
HAND AND LEFT HAND VERSIONS. WHEN  
MOUNTED CORRECTLY, THE BRACKET WILL  
ANGLE AWAY FROM THE OPENING.

4) MARK MOUNTING HOLE LOCATIONS. RELEASE  
DOOR TO CLOSED POSITION. USING THE  
SUPPLIED TEK SCREWS, MOUNT THE HOLD  
OPEN DEVICE TO THE FACE OF THE JAMB.

5) HEIGHT ADJUSTMENTS MAY BE NEEDED, TO  
GAIN OPTIMAL HOLDING.

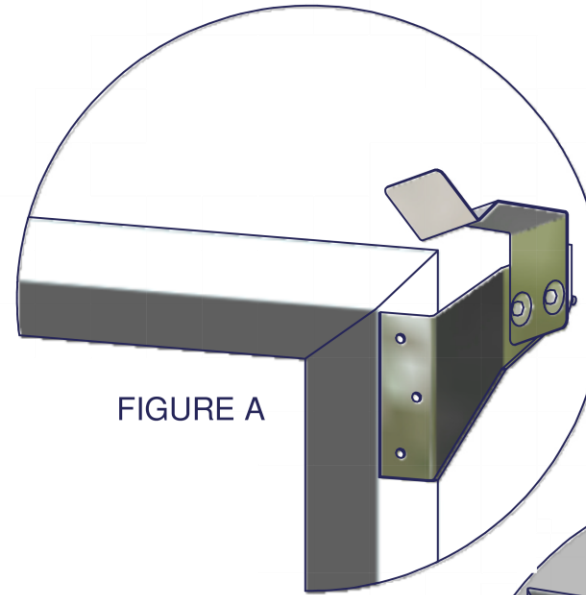


FIGURE A

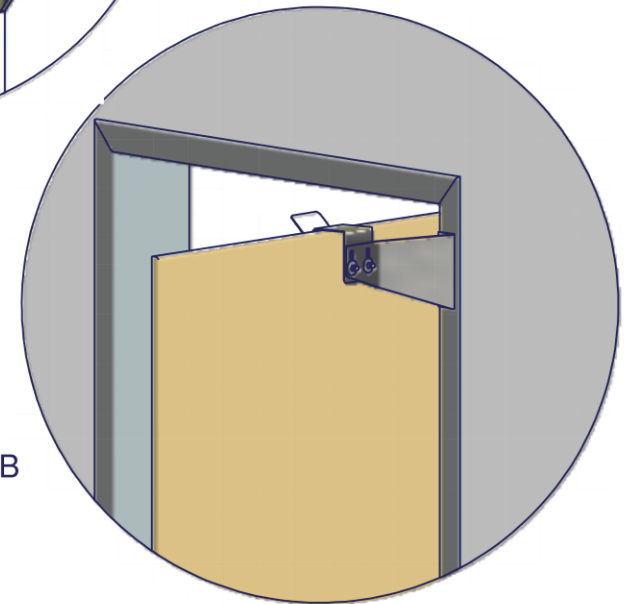


FIGURE B

NOTES:

1. All dimensions are in inches unless otherwise noted.
2. Deburr and break all sharp edges.

UNLESS OTHERWISE SPECIFIED

TOLERANCE MACHINED SURFACES

MATERIAL:

FINISH:

SUPERSEDES

INTERCHANGEABLE

SUPERSEDED BY

WEIGHT

INTERCHANGEABLE

USED ON

**Strip-Curtains.com**

NAME:

JAMB MOUNTED HOLD OPEN DEVICE

DR:

BC

SCALE:

NTS

CK:

PART NO.: JAMB MOUNTED HOLD  
OPEN INSTRUCTIONS

DATE:

4/9/2009

A

JMHOD

REV.

2

1