
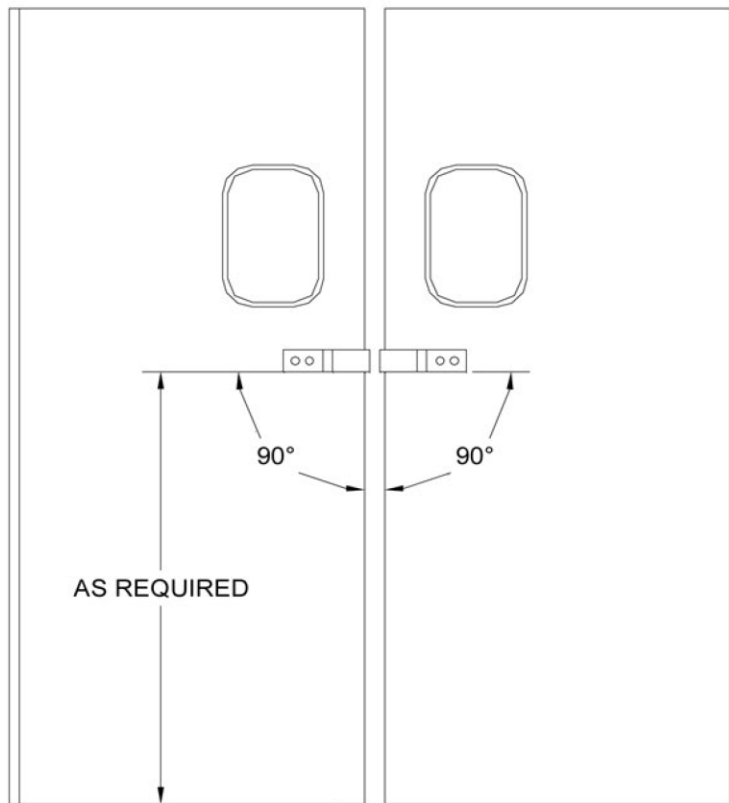


**FIELD INSTALLATION INSTRUCTIONS
INSTALLING A PADLOCK BRACKET
HEAVY WEIGHT DOORS**

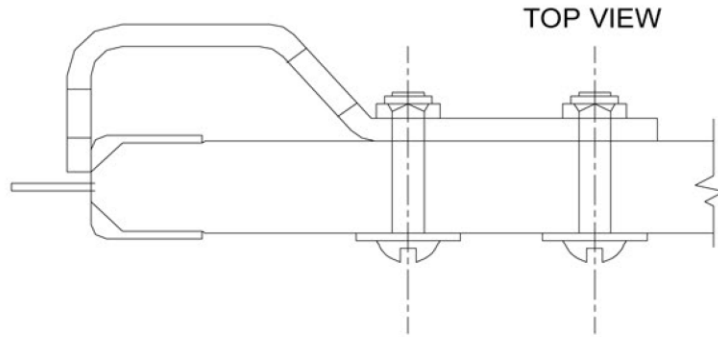

NOTE: USE 1/4" DRILL
FOR SCREW HOLES

DOOR TYPE	FASTENERS	
	QTY	DESCRIPTION
.75" DOORS	2	1/4"-20 X 1-3/8" BUTTON SOCKET CAP SCREW
	2	1/4"-20 HEX HEAD NYLOCK NUT
	2	1/4"-20 WASHERS
1 1/2" DOORS	2	1/4"-20 X 3" PHILIP TRUSS HEAD MACHINE SCREW***
	2	1/4"-20 HEX HEAD NYLOCK NUT
	2	1/4"-20 WASHERS

***BREAK SCREW OFF FLUSH WITH TOP OF NUT, FILE SCREW TO REMOVE SHARP EDGES

Strip-Curtains.com